

Pneumatic Stool with Back Rest



Congratulations on your purchase of the Earthlite Pneumatic Stool with back rest. The following instructions will guide you through each step of assembly.

1. Verify all inventory parts as noted in the diagram.
2. Insert wheels into stool base. Seating them securely may take some force. Place stool base on the floor with wheels facing down.

3. REMOVE AND DISCARD

PROTECTIVE PLASTIC CAP FROM PNEUMATIC CYLINDER.

Note: If you did not order stool with foot ring, SKIP to step 6.

4. (Optional*) Remove adjustable foot ring knob. Pull up the sleeve in the foot ring hole and make sure the metal portion is facing the knob insert point.
5. (Optional*) Place the large metal end of the cylinder into the round opening in the foot ring. Then place cylinder with foot ring attached, into the round opening of the stool base.
6. Remove and discard plastic tube attached to the bottom of the seat. Unscrew the adjustment knob from the bottom of the seat, insert short end of seat bracket, replace and tighten knob.
7. Unscrew the adjustable knob from the rear of the back rest, insert long end of metal bracket, replace and tighten knob.
8. Insert seat onto the top of the pneumatic cylinder. Carefully sit down on the seat until the cylinder locks in place.

* Optional Foot Ring is available for standard height stools only.

